





**DELTRONICS IDB-1/e**

9V V+ →

Switch →

Ground →

BT1

VR1

Tempo

MIDI/DINsync

Reset In

Clock In

Trigger Out

Audio Out

DINsync

MIDI

RUN

MODE

SET

HI / LO

SELECT

L17

L18

L19

BD

SD

LT

HT

WB

HC

CH

OH

PB1

PB2

PB3

PB4

PB5

PB6

PB7

PB8

L1

L2

L3

L4

L5

L6

L7

L8

L9

L10

L11

L12

L13

L14

L15

L16